


#423040 Bilge Pump Panel, Breaker Installation Instructions

Switch Position:

OFF No circuits are activated

MANUAL When switch is in manual position, red LED light (at top) will illuminate, to indicate that bilge pump is running. It will continue to run until the switch is changed to the "OFF" position. If green LED light is illuminated, auto float switch has been activated, indicating a high bilge water level.

AUTO When switch is in auto position, green LED light (at bottom) is illuminated, to indicate that the circuit is activated. If bilge pump float switch is turned on by rising bilge water level, red LED light will illuminate to indicate that bilge pump circuit is activated. When bilge water level lowers to a level where the auto float switch is deactivated, red LED light will cease to illuminate.

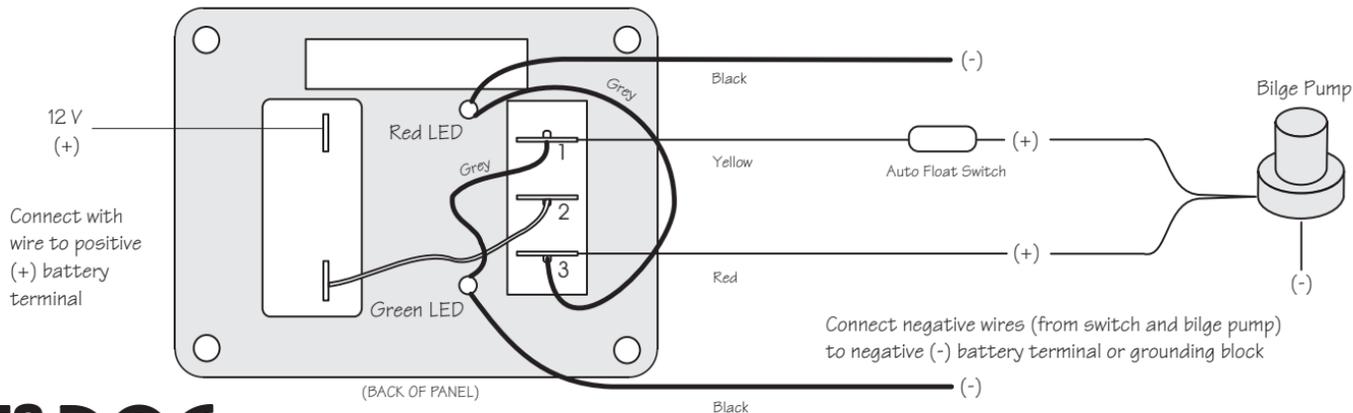

SEADOG
LINE®

#D423040
Made In USA

A Division of Sea-Dog Corporation P.O. Box 479, Everett, WA 98206